

HP Color LaserJet MFP M477fnw

Job Storage

Job Storage Description

Job Storage allows you to send the print job to the printer and have it stored there until you print it from the printer's control panel. Some Job Storage jobs allow an optional PIN to be associated with the job for extra security.

Job Storage USB Installation

To enable Job Storage, you must first insert a dedicated USB storage device (with at least 16GB of memory) in the rear USB slot. This USB storage device will hold the Job Storage jobs sent to the printer. If this USB storage device is removed, Job Storage will be disabled on the printer.

Insert the USB drive in the rear USB slot and follow the instructions on the control panel. This USB drive will be dedicated to Job Storage. The front USB slot will not work for Job Storage.

1. The USB cover may need to be removed to reveal the USB slot on some printer models. If there is a cover, remove it.

2. Insert a USB drive with at least 16GB of memory.

3. Follow the Control Panel messages to format the USB drive for Job Storage.

You may need to update your printer driver if you do not find the "Job Storage" tab after enabling the feature in the printer. Go to the following URL for instructions on how to update the printer driver.

<http://www.hp.com/support/jobstorage>